



Wave Table - User Guide

This manual has been written to help you get the most from your Wave Table.


Please ensure that you read this fully as it contains important information on setting up your remote control. Failure to follow this advice may result in damage to the controller and may invalidate your warranty.

Keep this guide in a safe place for future reference.



Setting up

Cable Connection

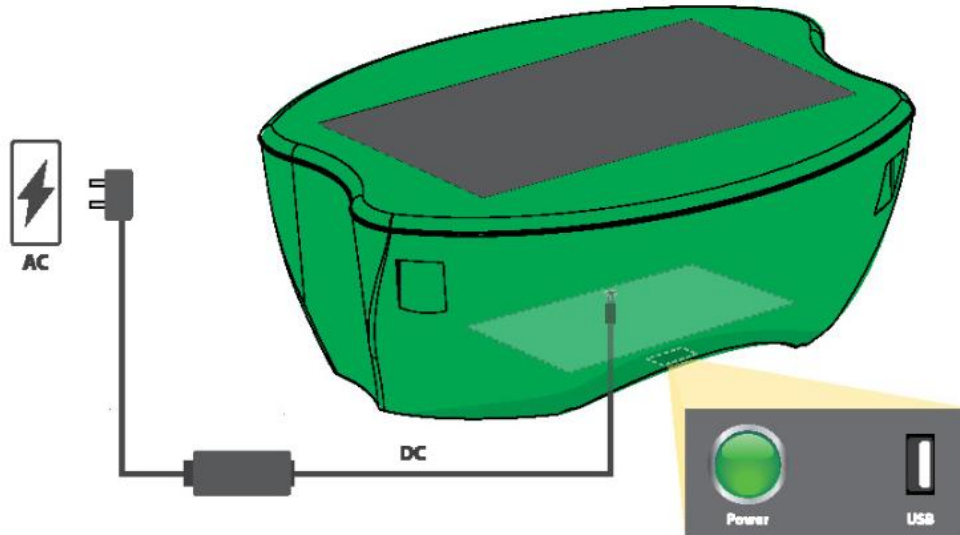

- Connect the AC to DC Power Adapter to the power socket.
- Connect another end (DC cable) of the power adapter to the Wave Table
- Please connect the power adapter before using the Wave Table.
- To turn on – press the green button at the back and wait for the android boot up.
- To turn off – press the green button at the back again.

Power Adapter Specification

Voltage Input	100-240V, 50/60Hz, 1.5A
Voltage Output	19V
Current Output	5A

Android System Specification

eFun Table run in android. Here is the specification of the android system:

CPU	RK3399, Hexa Core 2.0Ghz High performance CPU (Dual core Cortex-A72, up to 2.0GHz + Quad core Cortex-A53, up to 1.5GHz)
GPU	Mali-T860 GPU, support 4K video processing
Operating System	Android
Memory (RAM)	DDR4 4GB
Storage	16GB / 32GB Nand Flash
Wireless Connection	WIFI 802.11 b/g/n/ac 2.4G/5G Bluetooth 4.1

1. Ensure that the packaging is carefully removed and keep the packaging in case the items need to be returned.
2. If you find any damage when you unpack the Wave Table you should report it immediately and within 7 days to your supplier.
3. Follow all the installation instructions carefully.
4. This product is designed and intended for indoor use only.
5. Do not expose this product to water or moisture in order to avoid fire and electric shock. Do not operate this product in a damp environment.
6. Always place this product on stable and level floor surface.
7. Always use this product at the indicated supply voltage only. Failure to do so may result in fire, electric shock, or product damage.
8. Use only the included power cord, power plug or power adaptor. Use of other types of power cord, power plug, or adaptor may result in fire or electric shock.
9. Always insert the power plug or power adaptor fully into the power outlet. Otherwise, it may result in overheat, electric shock or fire.
10. If the power plug does not fit into the power outlet, contact a licensed electrician to replace the obsolete outlet.
11. When unplugging the power plug or power adaptor, hold it by the plug. Do not pull on the power cord as it may damage to the power cord and may cause fire or electric shock.
12. Do not bend or twist or place any heavy object on the power cord.
13. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
14. **WARNING** Indicates a potential hazard that could result in serious injury or death and/or property damage.
15. **CAUTION** Indicates hazards that could result in minor or moderate injury and/or property damage.
16. Do not open or alter the casing of this product. Electric shock or injury may result.
17. Do not attempt to repair, modify, or disassemble this product. If any part of this product is damaged or frayed, contact an authorized service representative.
18. Never handle this product with wet hands as it may result in electric shock.
19. Do not insert any metallic objects into this product or into a contact.
20. Unplug the power plug or power adaptor before cleaning. Always use a dry, soft cloth for cleaning.
21. If the product emits smoke, excessive heat, abnormal smell or unusual noise, turn off the product and unplug the power plug immediately. Contact an authorised service representative.

22. Carefully locate any parts and/or accessories of this product to avoid potential tripping hazards.
23. Do not operate this product at high temperature and/or high humidity environment.
24. Application ambient conditions: Temperature: 0°C to 40°C; Non-condensing
25. This product must be disposed in accordance with the relevant federal, state, and local laws and regulations.
26. Never allow children to operate this product without proper adult supervision.
27. Do not place this product near any heat sources above 100°C.
28. Do not expose this product to excessive dust or vibrations, or high humidity, extreme cold or heat (such as in direct sunlight, near a heater, or near an air-conditioning vent).
29. Do not install this product where it would be exposed to direct sunlight or strong lighting.
30. Do not place a heavy object on this product to avoid product damage.
31. Do not pour or spray any liquid onto this product or its components. Accidental spillage of liquid into this product may cause serious damage. If this occurs, immediately turn off this product and unplug the power plug from the power outlet. Contact an authorised service representative for service.
32. Unplug this product when unused for a long period of time. Take out all the batteries from any components of this product to avoid leaking. Do not use leaked batteries.
33. Unplug the power cord before moving this product.
34. If this product falls down, immediately turn off the product and unplug the power cord. Otherwise, it may cause fire or electric shock.
35. Keep the writing surface clean.
36. Turn off the product before cleaning.

Wooden Stand Instructions for Wave Table



Middle Wood Board x1



Bottom Wood Board & Wheel x1



Side Wood Board(outside) x2



Side Wood Board(inside) x2



Side Wood Coverx2



Axis Iron Pillar x1

Lock / Unlock



Lock



Unlock

WARNING

- Follow all installation instructions carefully.
- Ensure to handle with care during the installation, avoiding serious injury and/or product damage.

CAUTION

- Do not install this product in location where it may be exposed directly to sunlight, near heating equipment, or near air-conditioning vents.
- Do not install this product in strong sunlight or strong lighting location.
- Do not install this product in location where the temperature may change suddenly



Do not sit on top.



Do not jump on top.



Maxium weight: 40KG



Not for outdoor use.



Use under parental supervision.



Two people are required for lifting & moving.


BASIC CONTROL OF ANDROID SYSTEM



Icon	Description	Function
	Capture	Screen Capture
	Return button	Back to the upper level directory
	Homepage button	Go to the Home Screen
	Program button	Open the recently used applications
	Rotate	Rotate Screen
	Volume decrease button	Decrease volume
	Volume increase button	Increase volume


Connecting WiFi

 Click on Setting

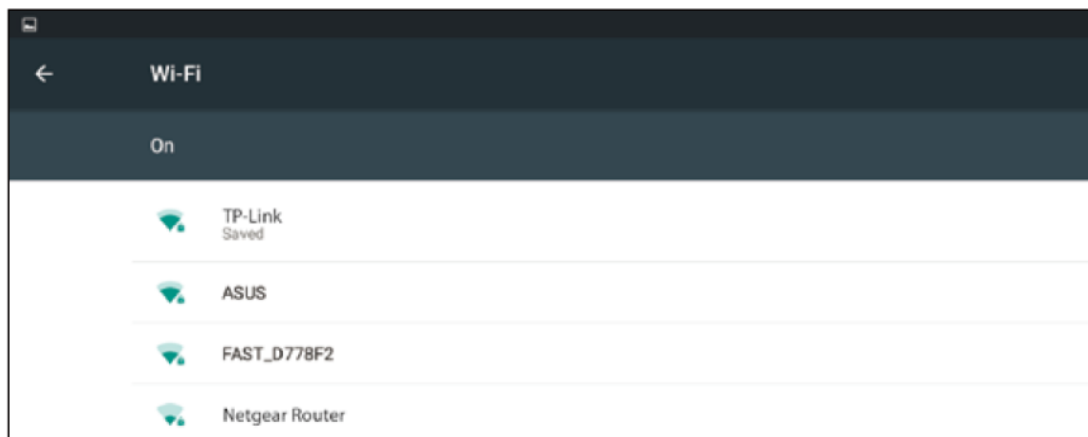


1. Turn on the WIFI, and then select the WIFI network to connect.
2. Enter the password if necessary.
3. The WIFI network will be saved after connecting successfully. It will automatically reconnect the WIFI network for the next time.

 Screen Rotation

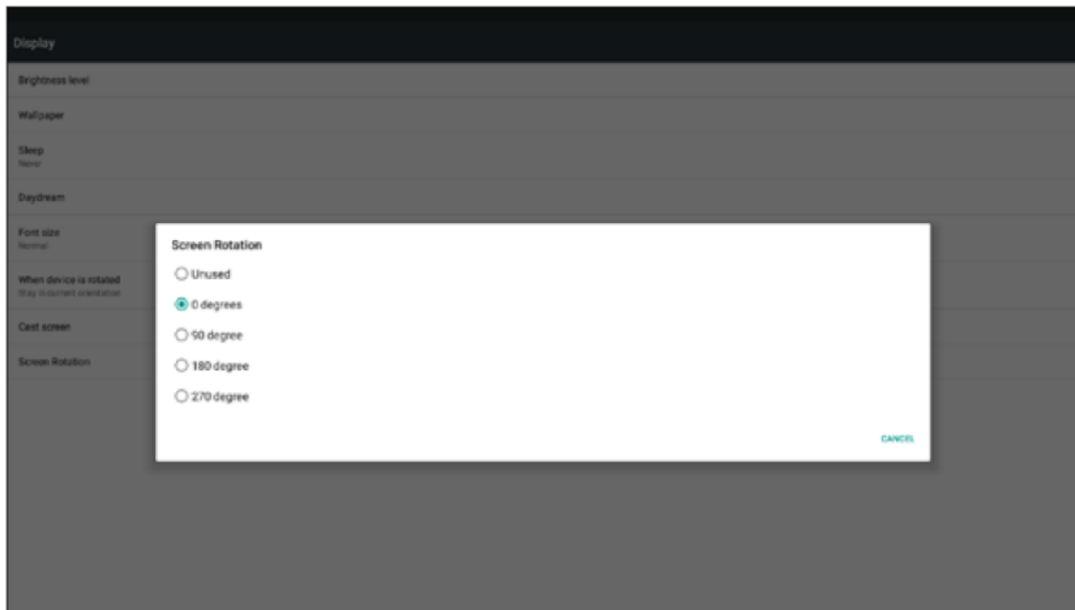

To use with eFun Table, it is recommend to use with screen rotation, you can rotate the screen directly on toolbar or you can go to setting > display > screen rotation to rotate the screen manually.

Selecting Language

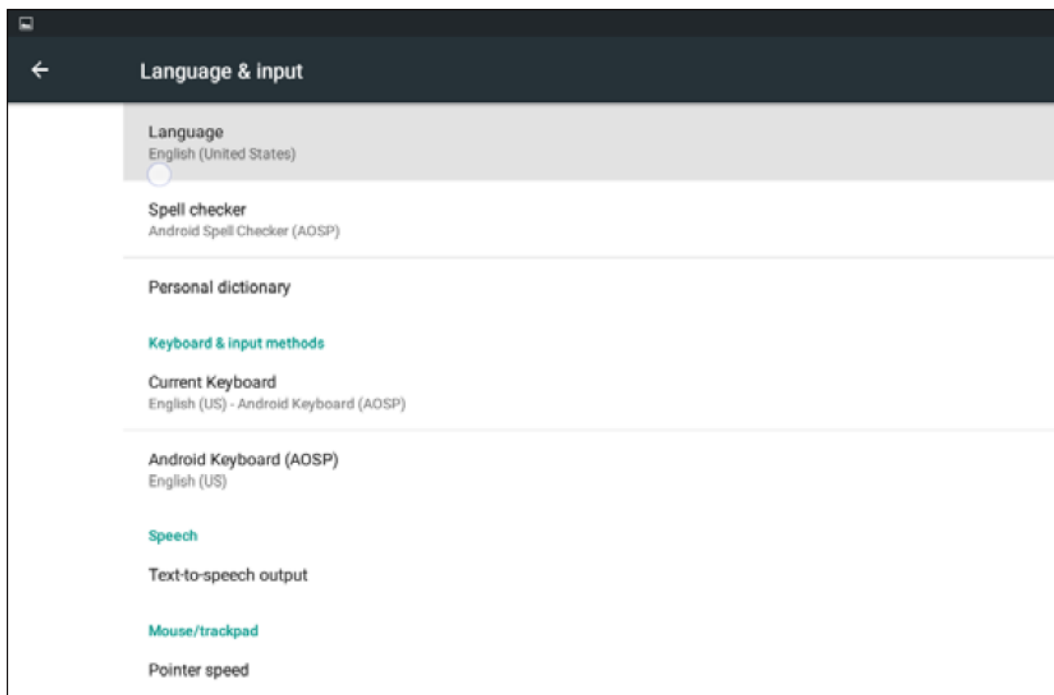

1. To change to different language, go to Setting > language & Input.
2. Tap on "Language" to change the display language.
You may also change the Input & Keyboard language here.

Notices

Every effort has been made to ensure all information contained in this user guide is correct, but the accuracy or completeness is not guaranteed. Before using this product, you must evaluate it and determine if it is suitable for your intended application. You assume all risks and liability associated with such use. Any statements related to this product which is not contained in this manual or any contrary statements contained on your purchase order shall have no force of effect unless expressly agreed upon, in writing, by Sense Sensory.

The contents of this user guide are subject to change without prior notice.



Sense Sensory Limited

www.sensesensory.co.uk 01702 810016 info@sensesensory.co.uk