

INSTALLATION OF FIXED CONNECTION WALL PADDING

We provide:

- Padding made to measure- vinyl covered
- With board backing
- 50mm Mirror Brackets for connection



We do not provide screws as this depends on your wall type. The padding is manufactured with a 9mm board backing, cut in down each length – this is to create some movement in the pads- and allow the installer to ‘push’ the foam back to connect the pads to the wall and then cover the fixings with the pad.

Step 1:

Carefully unpack all the padding, without using sharps as this could damage the material.

Lay out all the pads and check which is going on first.

Step 2:


Drill one half of the mirror bracket back to the board backing, as pictured below

Place them down either side of the pad, from top to bottom, evenly spaced.

Step 3:

Offer the pad up to the wall and position where required- push the foam back with your hands and drill the other half of the mirror bracket back into the wall. Continue down the length of the pad, either side, at least one top, bottom and middle.

Repeat with the next pad.

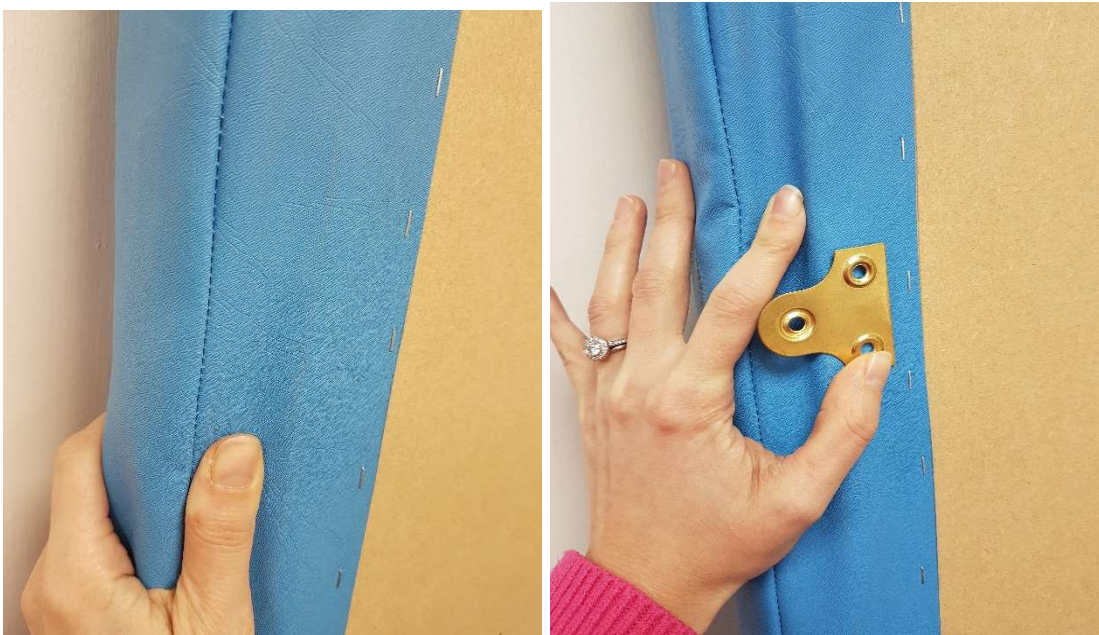

IPC Cleaning Instructions for Sensory Products

To comply with NHS and school infection prevention and control (IPC) standards, it is recommended all sensory equipment must be cleaned between users. Use a non-abrasive, alcohol-free antibacterial wipe or a disinfectant spray diluted to 1,000ppm chlorine. Focus cleaning on high-touch areas such as buttons, hand grips, and surfaces that come into close contact with users. Allow items to air dry fully before reuse.

Avoid immersing or soaking electrical components—use a lightly dampened cloth instead and ensure no liquid enters electronic parts. Ensure staff are trained in correct cleaning procedures and that all cleaning agents used are compatible with product materials to prevent damage.

This product is UKCA approved